

# Disassembly Instructions for Recycling

## Storage and Screen

**Martela**

Martela storage and screens is designed to be used in its original use as long as possible and each product family is tested according relevant EN standards to verify at minimum ten year use-life for the product before product is released for sales. Martela recommends maintaining the usability of the product by monitoring the tightness of the mechanical joints.

Martela storage and screens can be demounted into components without special tools to enable component reuse and secondarily material recycling when the product has reached its full lifetime. Dismantling is possible with commonly used simple manual tools except apply to constituent components such as wood fiber, glue and laminate in panels.

### Tools Required

- Protective glasses
- Utility knife
- Scissors
- Hammer/Sledgehammer
- Phillips screwdriver
- Chisel head screwdriver
- Torx screwdriver
- Hex wrench
- Pliers
- Magnet

# Disassembly Instructions for Recycling

## Storage and Screen

### Storage

Product Series like Capa, Combo, etc



### Disassembly instructions

Disassemble only to the point that materials need to be separated for recycling or proper disposal. More detailed information on the structure and materials can be found in product specific drawings, which you can request at [export@martela.com](mailto:export@martela.com), [kundeservice@martela.no](mailto:kundeservice@martela.no) (Norway) or [info@martela.se](mailto:info@martela.se) (Sweden).

- Remove drawers and doors from storage
- Remove pulls, slides and hinges
- Remove all visible fasteners that secure the base to the table top
- Remove all the plastic glides and other parts from metal components
- Sort the removed components according to the material according to the instructions of the local recycling system

### Typical materials by component type

Steel	base, frame, hinge, (magnetic)
Aluminum	base, frame, handle (non-magnetic)
Zinc	hardware (non-magnetic)
Wood	shelf, frame, back, side
Polypropylene	glide, roller shutter

# Disassembly Instructions for Recycling Storage and Screen

## Screens

Product Series like Face, etc



## Disassembly instructions

Disassemble only to the point that materials need to be separated for recycling or proper disposal. More detailed information on the structure and materials can be found in product specific drawings, which you can request at [export@martela.com](mailto:export@martela.com), [kundeservice@martela.no](mailto:kundeservice@martela.no) (Norway) or [info@martela.se](mailto:info@martela.se) (Sweden).

- Remove the bracket or legs or the screen
- Open the zipper of the upholstery where applicable or cut the fabric from all surfaces with universal knife
- Remove the acoustic board and dismantle the corner pieces from the frame
- Remove all the plastic glides and other parts from metal components
- Sort the removed components according to the material according to the instructions of the local recycling system

## Typical materials by component type

Steel	leg, bracket (magnetic)
Aluminum	frame (non-magnetic)
Zinc	hardware (non-magnetic)
Nylon	corner fixture
Fabric	upholstery
Polypropylene	glide
Polyethylene	acoustic board